

BATHROOM TILTING MIRROR INSTRUCTIONS

PRE-INSTALLATION

Read the installation instructions entirely while conforming with all local building codes.


NOTE: Wood blocking is always recommended, as included mounting hardware may not be suitable for drywall. Professional installation is recommended if you don't have experience installing bathroom products of this nature.

TOOLS AND MATERIALS


- Basic Handtools
- Drill
- Tape Measure
- Level
- Stud Finder

INSTALLATION

1. Use the help of someone else, center the mirror atop the sink at the necessary position and mark a line on the wall at the mirror's highest point.

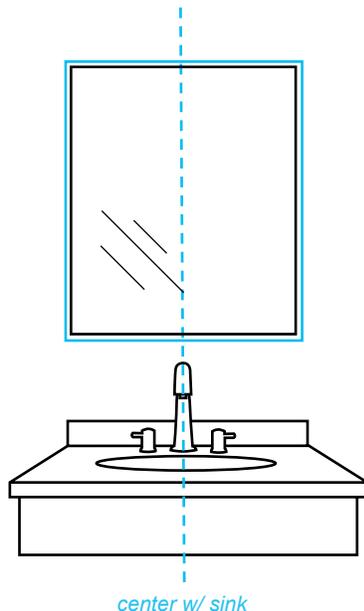


2. Find and mark the location of the wall studs that will be used to attach the mirror. These are located by listening for a solid sound while knocking on the wall or with a stud finder.

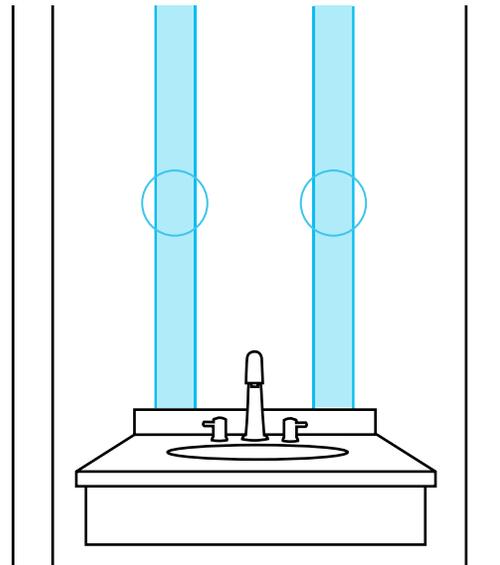


3. If not attached, attach the included nylon pads on the interior of the decorative brackets (opposite the set screws). This stops the mirror from shifting out of place.

IMPORTANT: Don't hang the mirror without installing the nylon pads; the mirror's warranty will be voided.

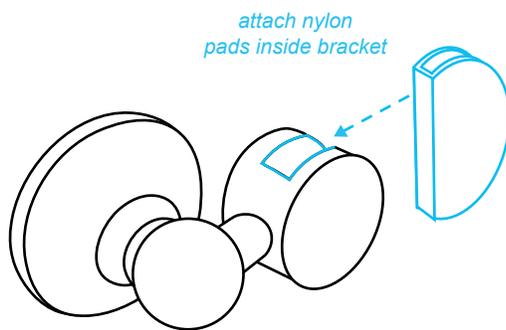


4. Insert the decorative brackets on the mirror and secure them by using an Allen wrench (included) or screwdriver to tighten the set screws. A tape measure and level can be used to show the two brackets are aligned correctly.

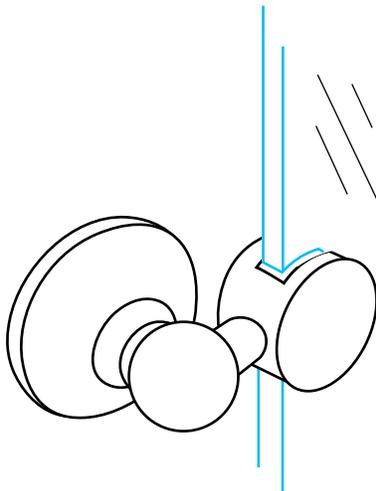

5. Measure the space between the centerlines of the mirror's (2) mounting brackets to decide where to place the mounting hardware. The top of the mirror can be used as a guideline, while a level will again verify whether the mounting hardware is aligned correctly.

6. Drill pilot holes and affix the mounting brackets to the wall via included hardware. A level and tape measure allow you to determine whether the brackets are entirely straight and positioned properly.

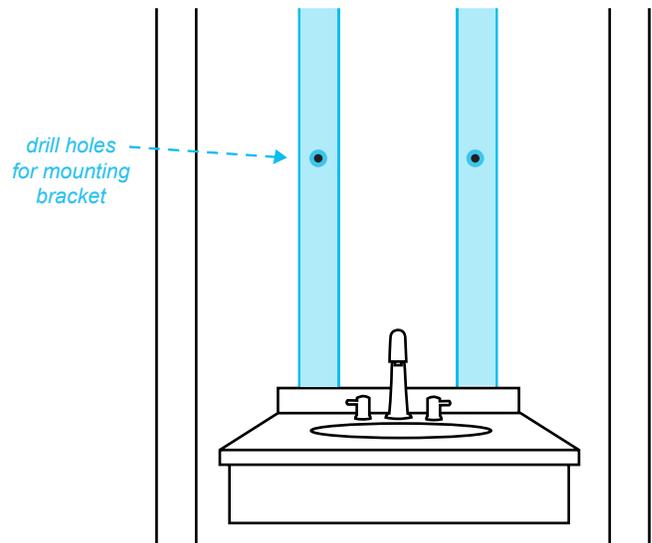

7. Ask someone for assistance in attaching the mirror to the mounting brackets. Use an Allen wrench (included) or screwdriver to tighten the set screws on the underside of the brackets to secure.

IMPORTANT: Items such as towels and similar accessories should not be hung from the mirror.

