

## Installation instructions

### - Shower Foot Rest


---

CAREFULLY READ THIS INSTRUCTION MANUAL BEFORE  
INSTALLING AND USING THIS PRODUCT



PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE  
REFERANCE FOR PRODUCT OPERATION AND MAINTENANCE

---


#### Tools Required:

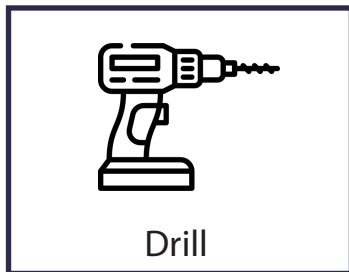


#### Parts:

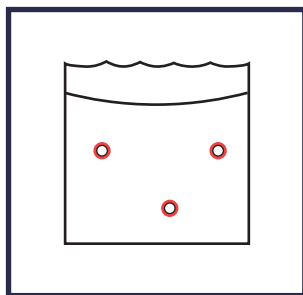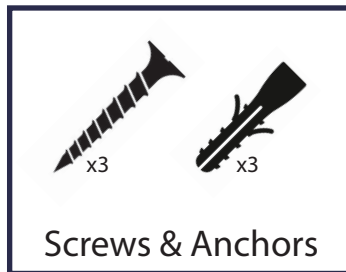


1. Align your foot rest exactly where you would like it placed. With a pen, mark where the pilot holes will need to go

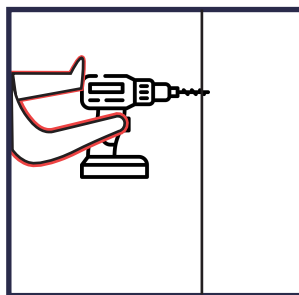

2. Once you have your marks. Drill into the tile firmly with two hands. The holes should be just smaller than the screws

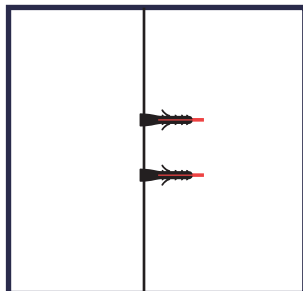

3. Push the wall anchors into the holes as far as possible.

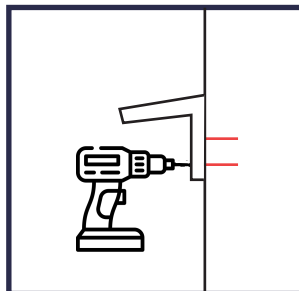

4. Line up your foot rest with the anchors. Drill the screws into the anchors through the foot rest. Ensuring to tighten all connections when all three have been completed