




## **INSTALLATION INSTRUCTIONS**

### **Parts Included**

- 2 Angled Rod Pieces • 1 Grey Insert •
- 2 #300 Flanges • 8 Wall Screws • 2 Set Screws •

### **Tools Needed**

- Pencil • Drill • Measuring Tape • Hacksaw (Optional) •

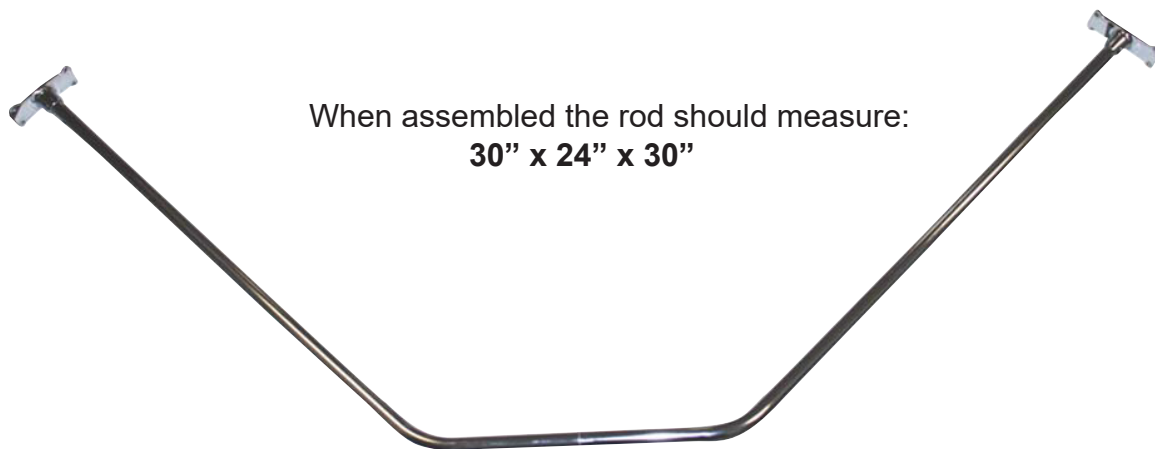

When assembled the rod should measure:  
**30" x 24" x 30"**

1. Attach the two rods together by inserting the grey insert into one end and then pushing the other rod onto it until secure.
2. Place rod with flanges on against wall and mark holes for flanges.
3. Attach flanges to wall and secure with screws.
4. The Neo Angle assembly fits into the flanges and is secured with set screws.
5. Rods can be adjusted to fit by cutting them with a hacksaw.