

## **Wall-Mount Basin Sink Installation Instructions**

## **Tools Needed:**

- Screwdriver
- Drill & Bits
- Level
- Plumbers Basin Wrench to secure Faucet (Optional)
- Wrench
- Pencil







## Installation Instructions:

- 1. Determine the height you want. Place sink in the corner. Use a level to make sure both sides are level.
- 2. Install mounting studs in the proper locations on the wall. Mark the location of mounting bracket holes on the wall.
- 3. Remove the bowl from the wall.
- **4.** Start to drill hole through 2"x12" re-inforced wall for the mounting hardware. If drill bit hits a stud, mount studs using mounting hardware.
- **5.** Before replacing bowl, it would be convenient at this point to mount the faucet according to the manufacturer's instructions.
- **6.** Hang bowl on mounting studs and ensure that it is level.
- 7. Connect all supply tubes to the faucet. Connect trap and drain assembly as described by the manufacturer.

\*Be sure to re-inforce wall before installation. We recommend a 2"x12" securely fastened to wall stude at desired height for installation.

<sup>\*\*</sup>mounting hardware included


## **Wall-Mount Basin Sink Installation Instructions**



1. Plumbing should be 8 inches apart



**3.** Make sure thatt the brackets are spaced centered on the plumbing

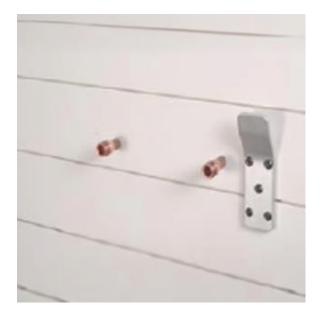

2. Mounting brackets should be installed 11.4 - 11.8



**4.** Ensure that the brackets are level